





## INSTALLATION INSTRUCTIONS


### COMBINATION SLIDING DOORPULL AND LOCK

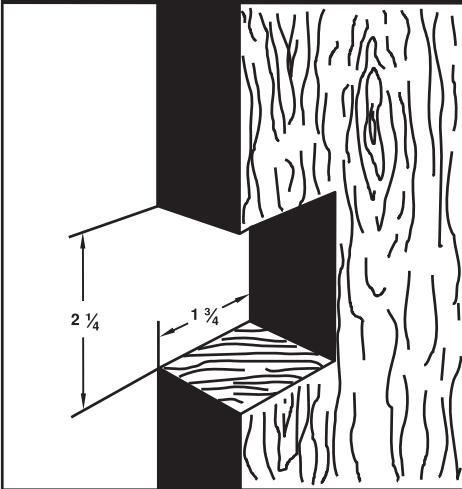

**1** Cut one simple notch in door.

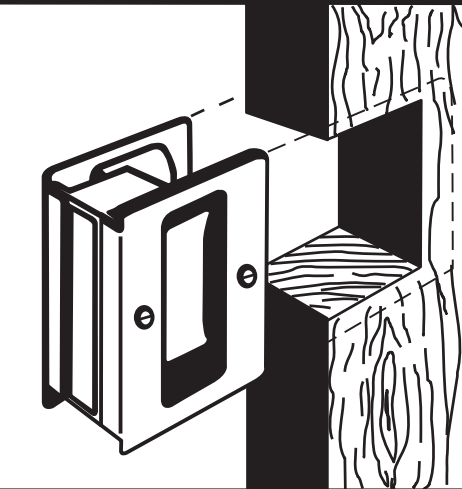


**2** Slip pull into position as shown.

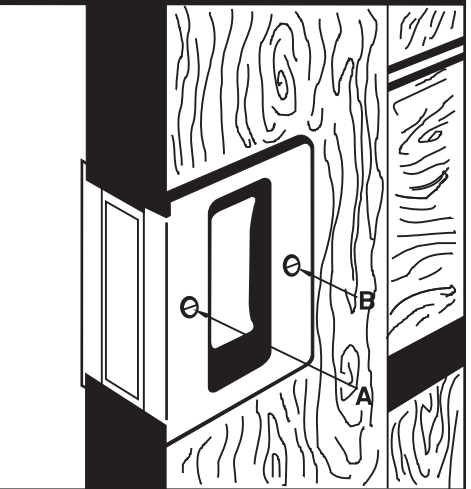

**3** (A) Fasten machine screw which tightens and automatically aligns pull. (B) Insert wood screw and tighten.

### INSTALLATION OF STRIKE PLATE FOR LOCKING SET ONLY

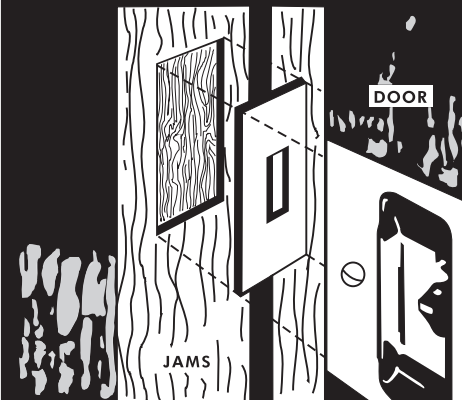

**1** Mark and mortise strike on jamb to correspond to lock position on door.




**2** Drill 15/16" diameter hole 1/2" deep in center of mortise.



**3** Screw strike plate into position using #6 x 3/4" lg. Flat head wood screws.

### TO ASSEMBLE AFTER REVERSING PLATES

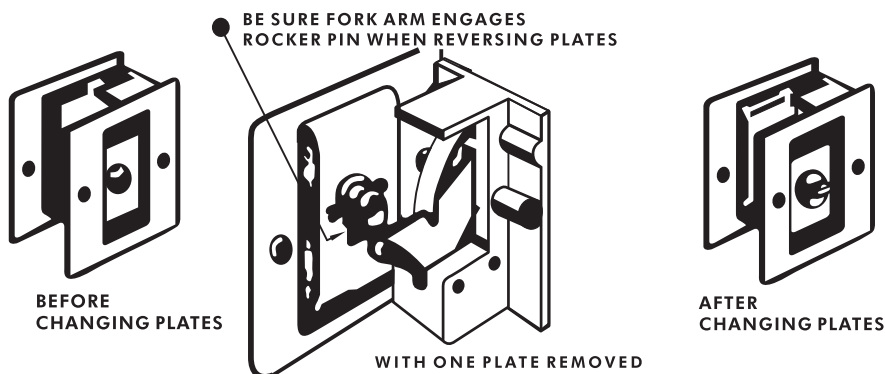

When it is desirable to reverse outside plates on lock assembly, first remove machine screw on each side-change plates from side to side (making sure that fork arm engages rocker pin) and re-assemble.